



3- AND 4-STRING NECKS, A FEW TIPS

Before adding shims take care not to bend the projecting fingerboard to avoid loosening or ejecting any frets


If the sound board (or box top) extends to the end of the neck extension cut the upstand to suit.

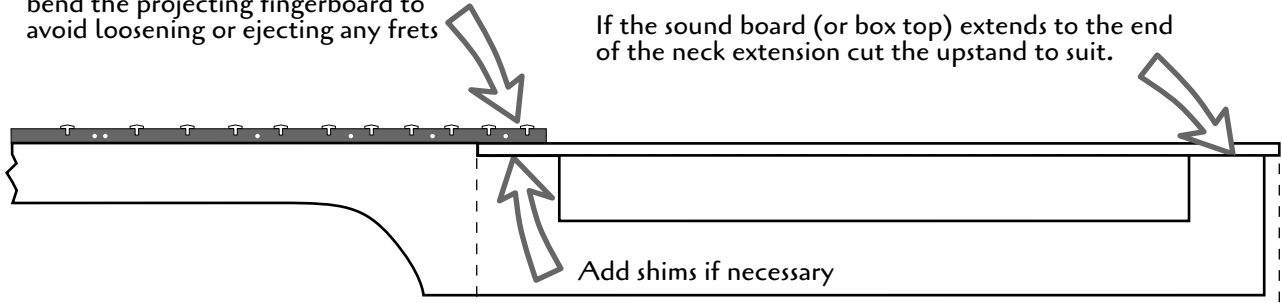


If the sound board (or box top) is thicker than the slot just remove a section of the fretboard to suit.

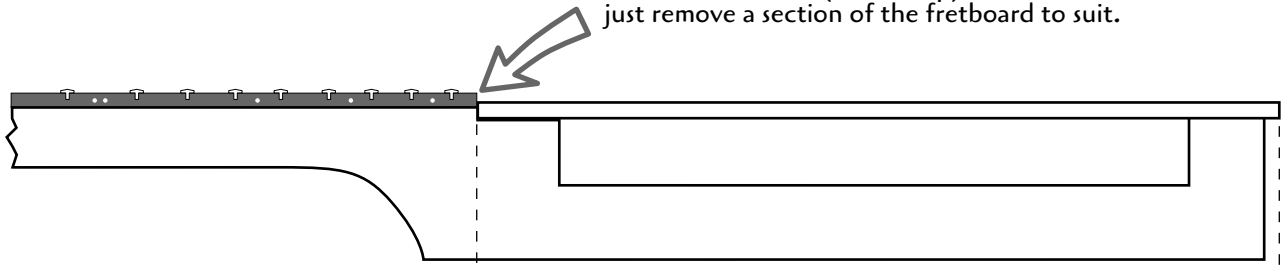

If you use a box which is shorter than the neck extension just add a wood block and cut off the end if required.

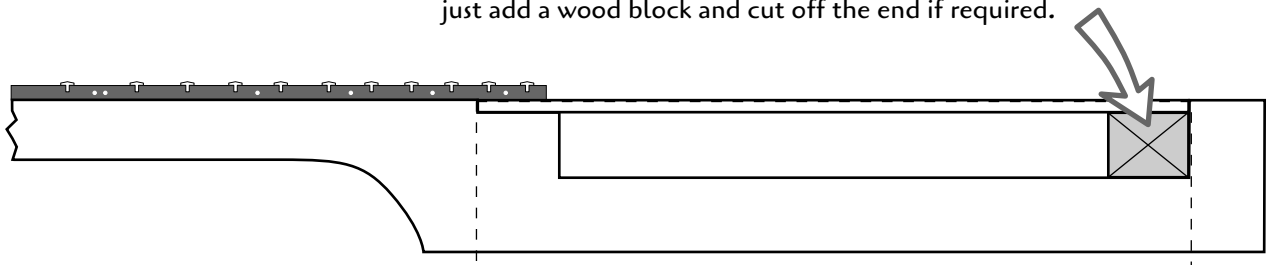

Adding screws are optional

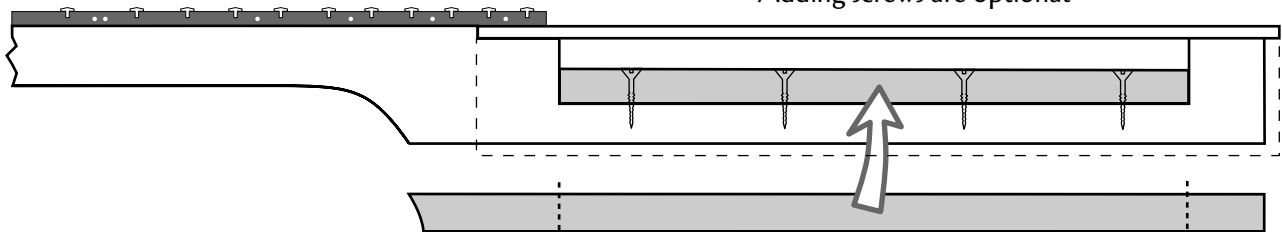

If you remove more than a few millimetres you may need to glue a cut-to-size section of wood to the neck extension.

• CRAVE DESIGNS •